

**Paket İeriđi:
(Package Contents)**

-1 Adet 8x80 mm
imbus bařlı civata
**(1 piece of 8x80 mm
hex head bolt)**

-1 Adet 21x52 mm
kademeli alüminyum bur
**(1 piece of 21x52 mm
stepped aluminum bushing)**

**Kullanılacak Takımlar:
(Necessary Tools)**

No:6 Alyan
(Number: 6 Allen)

**Montaj Videosu:
(Assembly video)**




NOTE: Please do not proceed with the product assembly without reading the assembly instructions and important precautions included in the package!!

NOT:Lütfen paket ierisindeki montaj talimatlarını ve önemli uyarıları okumadan ürün montajına başlamayınız!!



Gösterildiği gibi 6 alyan kullanarak sökünüz.

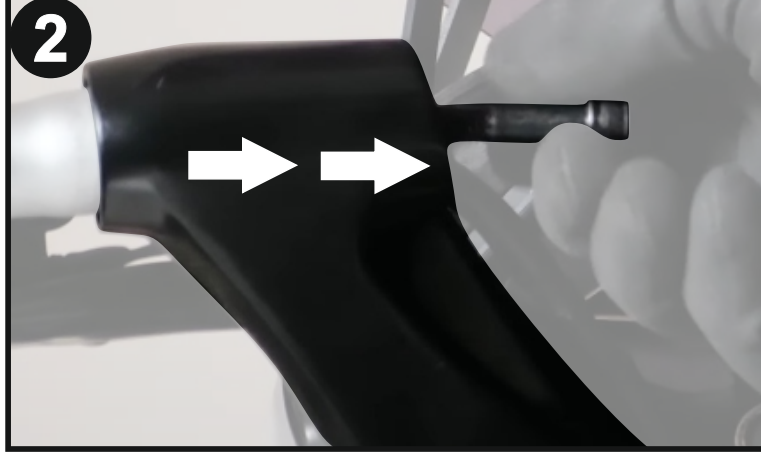

(Remove using a 6mm Allen wrench as shown.)

Paket içinden çıkan cıvata'yı telefon tutucu barın içinden geçiriniz.
Ardından gösterildiği gibi konumlandırıp 6 alyan yardımıyla sıkınız.

(Insert the bolt through the inside of the phone holder bracket. Then position it as shown and tighten it with the help of a 6 allen)

